



Manual Book



Home & Car Bottle Warmer

LG.2009



Heat Fast



Food & Drink



Portable



BPA Free



Waspada! segala bentuk kerusakan pada alat dan kabel sebelum penggunaan!

Letakkan pada permukaan rata, hindari tumpah / jatuh!

Isi air ke dalam wadah, semakin banyak air maka panas lebih lama;
panaskan: di atas garis minimum

simpan hangat: di bawah garis maksimum

Siapkan makanan / minuman bayi ke dalam pemanas, alat siap digunakan

Putar kenop suhu searah jarum jam

panaskan: 100° (5-8 menit)

simpan panas: 40°-70°

Alat akan terus menyesuaikan suhu untuk mempertahankan suhu yang diinginkan.

Putar kenop suhu ke OFF untuk menghentikan segala aktivitas dan mematikan alat.

Cabut kabel & lap kering.

Pastikan alat sudah tidak panas sebelum dibersihkan dan di simpan!

Catatan: mode mobil & tanpa air hanya untuk simpan hangat

Tips

- Alat ini tidak diperuntukan untuk kegunaan lain selain untuk menghangatkan botol susu bayi.
- Jangan lupa untuk mengaduk makanan / kocok botol susu!
- Hindari penggunaan pada suhu maksimal secara terus menerus agar produk bisa bertahan lebih lama.
- Alat ini seharusnya digunakan di lingkungan pribadi (rumah dan mobil), bukan dalam situasi komersil.
- Alat ini TIDAK untuk digunakan oleh anak ataupun siapapun dengan keterbatasan fisik, sensorik, atau mental; ataupun yang kurang pengalaman / pengetahuan tanpa pengawasan!
- Segala penggunaan yang tidak tepat bisa berbahaya!




Mode Mobil & Rumah

penuhi kebutuhan bayi kapanpun & dimanapun dengan atau tanpa air

Desain Multifungsi

Panaskan & Jaga Kehangatan Makanan / Minuman Bayi dengan teknologi PTC impor

Komposisi

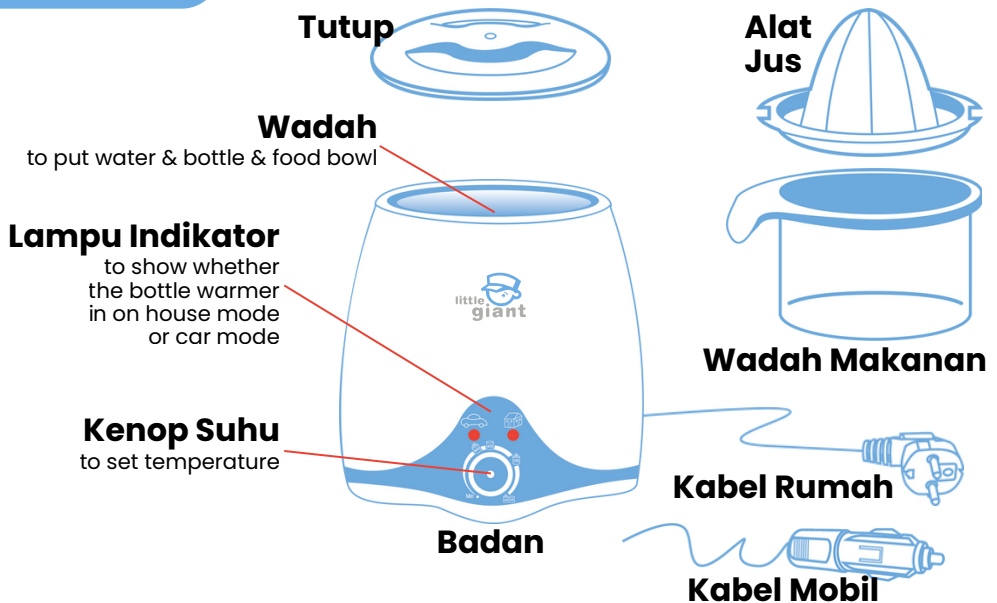

Spesifikasi (Rumah | Mobil)

Daya
80 Watt | 20 Watt

Tegangan
220-240VAC | 12VDC

Frekuensi
50/60Hz | -



1. Jauhkan alat dan kemasan dari jangkauan anak-anak!
2. Periksa suhu makanan / susu sebelum diberikan kepada bayi!
3. Segera konsumsi makanan / minuman yang sudah dihangatkan untuk menghindari perkembangan bakteri (yang biasanya paling cepat sekitar 32°-42°)!
4. Hindari memanaskan lebih dari 1x (untuk alasan kebersihan & mikrobiologi), atau memanaskan terlalu lama atau hingga terlalu panas (hilangnya kandungan penting dalam makanan)
5. Jangan mencabut dengan menarik kabel! Jangan menarik, memutar, membengkokkan kabel, ataupun mengitari kabel sekeliling alat!
6. Hanya gunakan aliran AC atau DC dengan tegangang yang sesuai dengan tipe pelat!
7. Hanya gunakan stop kontak dengan pemutus residu aliran listrik!

Petunjuk Pembersihan

1. Jangan rendam atau mengaliri alat!
2. Cukup lap kering untuk membersihkan!
3. Dilarang menggunakan alkohol, bensin, ataupun cairan organik lainnya untuk membersihkan!

Catatan: Silahkan bersihkan bercak pada besi setiap 4 minggu dengan campuran 50mL cuka + 100mL air dingin atau asam sitrat + 200mL air dingin. Tuang cairan ke dalam wadah & biarkan hingga bercak hilang dengan sendirinya. Jangan menggunakan alat selama proses ini. Buang cairan, bilas, dan lap kering.



1. Mohon untuk menghubungi Customer Service untuk segala pertanyaan mengenai penggunaan produk!
2. Jangan biarkan alat & kabel mengenai permukaan panas maupun benda tajam!
3. Jangan gunakan alat apabila terdapat kebocoran!
4. Jika alat tidak berfungsi dengan baik, lepaskan kabel lalu bersihkan dan rapihkan!
5. Jangan membedah atau memperbaiki alat secara mandiri dalam situasi apapun. Apabila demikian, tidak ada jaminan alat akan berfungsi dengan baik dan garansi akan hangus.
6. Segala perbaikan hanya boleh dilakukan oleh Service Center atau supplier yang berwenang!



All Rights Reserved
Little Giant Enterprise
www.littlegiant.com.au
www.littlegiant.co.id

Dibuat di China

Di import & distribusi oleh
PT LIGIENT
Jakarta Pusat, Indonesia

E-mail:
info@littlegiant.co.id

Nomor Registrasi K3L:
21-L-000031



Watch out for any visible damage on the appliance & cable before use

Place the product on an even surface to prevent spill / falling over

Fill the container with water, more water will slow down the heating process;

heat up: above min. line

keep warm: below max. line

Place the baby food / drink into the warmer and the appliance is ready to use

Turn the temperature knob clockwise

heat up: 100° (5-8 minutes)

keep warm: 40°-70°

The appliance will keep adjusting temperature to keep the desired temperature

Turn the temperature knob to OFF to stop any action and turn off the appliance.

Unplug and dry. Let the bottle warmer cool down before putting it back in the box or shelf!

Note: Car mode & without water are only for keep warm

Tips

- The bottle warmer should not be used for other purpose other than warming the baby milk bottle.
- Don't forget to stir the food in the jar / shake the bottle!
- Avoid setting the temperature to the maximum heat continuously to extend the product's life span!
- The warmer is intended to use in domestic/private environment (home and car) not in commercial situation.
- The warmer is NOT intended to use by any person with limited physical, sensory, or mental abilities; or those lacking in experience and/or knowledge unless supervised.
- Any improper use can be dangerous!

Features




Home & Car Mode
meets the baby's needs
anytime & anywhere!

**Food / Milk Quick
Heating & Keep Warm**

Multifunction Design
with or without water operation

High Efficiency & Energy Saving
with imported PTC technology

Composition

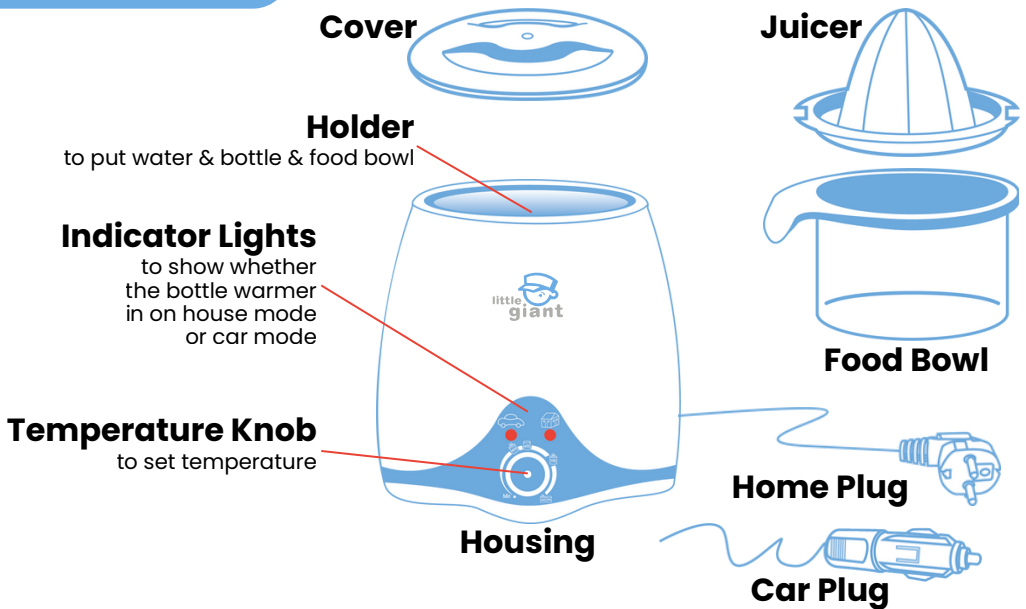

Specification (Home | Car)

Power
80 Watt | 20 Watt

Voltage
220-240VAC | 12VDC

Frequency
50/60Hz | -

Safety Notes



1. Keep the appliance & the packaging out of the children's reach!
2. Please test the food or drink temperature before feeding the baby!
3. Consume the heated food or drink as soon as possible to prevent bacteria breeding (which multiply fastest around 32°-42°)!
4. Avoid reheating food more than once (hygienic & microbiological reasons), overheating, or heating the food for too long (which cause the loss of important vitamins)!
5. Do Not remove the main plug from socket by pulling on the cable! Do Not pull, twist, bend the cable, or wind the cable around the appliance!
6. Only use AC or DC network with specified voltage on the type plate!
7. Only operate using a socket with a residual current circuit-breaker!

Cleaning

1. Do Not dip in water nor rinse in running water!
2. Only wipe clean the bottle warmer for cleaning!
3. Do Not use alcohol, gasoline, or any organic liquid for cleaning!

Note: You can descale the insides every 4 weeks using the mixture of 50mL of vinegar + 100mL of cold water or a packet of citric acid + 200mL of cold water. Pour the mixture into the container & leave it until the scale is gone on its own. Do not operate during this time. Pour out the liquid, rinse the warmer, and wipe dry.



1. Please contact the Customer Service for any question regarding the use of our appliances!
2. Do Not let the appliance & power supply plug come into contact with hot surfaces and sharp edged objects!
3. Do Not use the appliance if there is water leak!
4. Upon malfunctioning, disconnect the power supply plug then clean and keep away!
5. Don't open or repair the appliance yourself under any circumstances! Otherwise its perfect functioning will no longer be guaranteed & this will invalidate the warranty.
6. Repair must only be carried out by Service Center or authorized suppliers!



All Rights Reserved
Little Giant Enterprise
www.littlegiant.com.au
www.littlegiant.co.id

Made in China

Imported & distributed by
PT LIGIENT
Central Jakarta, Indonesia

E-mail:
info@littlegiant.co.id

K3L Registration Number:
21-L-000031