



Buku Panduan 

Multifunction Digital Bottle Warmer

LG.2110





Daftar Isi

Spesifikasi	3
Fungsi	4
Keamanan	5
Penyimpanan	8
Komponen	9
Panel Kontrol	10
Instruksi Pemakaian	12
Deskripsi Mode: Fast Warming	13
Deskripsi Mode: Milk Warming.	14
Deskripsi Mode: Food Warming.	15
Deskripsi Mode: Steam Sterilize.	16
Pembersihan	17
Pembersihan Kerak	18

Spesifikasi

Daya	200 Watt
Tegangan	220V-240V
Frekuensi	50/60Hz

Lingkungan Penyimpanan

Suhu	15-30°C
Kelembapan	50-80%RH

Fungsi



Pengaturan waktu
hingga 24 jam



Kontrol digital mudah
disentuh



Membersihkan mudah
cukup lap bersih



Cukup satu alat, dari
persiapan makanan hingga
membersihkan alat makan



Sterilisasi dengan steam
setelah memberi makan

Keamanan

 **Jangan Digunakan di Luar Ruangan!** – Alat ini dimaksudkan untuk digunakan di rumah tangga dan aplikasi serupa, seperti area dapur staf di toko, kantor, dan lingkungan kerja lainnya, rumah pertanian, area klien di hotel, motel, dan lingkungan residensial lainnya, serta penginapa kecil (B&B).

 **Jangan Rendam dalam Air!** – Jangan merendam kabel, steker, atau seluruh unit dalam air atau cairan apa pun untuk mencegah kebakaran, kejutan listrik, dan cedera pribadi. Hanya bagian dalam tangki yang dirancang untuk terkena air untuk tujuan pemanasan atau sterilisasi.

 **Ikuti Instruksi!** – Penyalahgunaan produk ini dapat menyebabkan risiko kebakaran, kejutan listrik, dan/atau cedera pribadi. Hanya gunakan aksesoris yang disediakan dengan alat ini untuk memastikan operasi yang aman.

Keamanan

 **Keamanan Bersama** – Alat ini dapat digunakan oleh orang berusia 14 tahun ke atas jika mereka telah menerima instruksi tentang penggunaan yang aman dan memahami bahaya yang terkait, atau jika mereka berada di bawah pengawasan.

 **Keamanan Anak** – Selalu periksa suhu makanan sebelum disajikan dengan mengujinya pada area kulit yang sensitif.

 **Peringatan Panas!** – Jangan menyentuh permukaan elemen pemanas setelah digunakan, karena masih menyimpan panas sisa. Air di dalam unit dapat mencapai suhu yang sangat tinggi dan menyebabkan luka bakar, jadi berhati-hatilah saat mengeluarkan barang dari pemanas makanan dan botol.

Keamanan

⚠ Jangan Menggunakan Pemanas Secara Berlebihan! – Ikuti pedoman pemanasan yang direkomendasikan untuk mencegah overheating dan memastikan makanan dipanaskan dengan aman.


⚠ Periksa Kesesuaian Tegangan! – Sebelum digunakan untuk pertamakalinya, pastikan alat ini kompatibel dengan pasokan listrik Anda dengan memeriksa kekuatan tegangan pada label di dasar unit.

⚠ Waspada Kerusakan Produk! – Periksa kabel dan steker secara teratur untuk kerusakan. Jangan menggunakan alat jika kabel atau steker rusak, jika terjadi malfungsi, atau jika telah rusak dengan cara apa pun. Perbaikan apa pun harus dilakukan oleh orang yang berkualifikasi untuk mencegah bahaya.

Penyimpanan


- Jauhkan alat ini dan kabelnya dari jangkauan anak-anak.
- Alat ini tidak dimaksudkan untuk digunakan oleh orang (termasuk anak-anak) dengan kemampuan fisik, sensorik, atau mental yang berkurang, atau kurangnya pengalaman dan pengetahuan, kecuali mereka telah diberikan pengawasan atau instruksi tentang penggunaan alat oleh orang yang bertanggung jawab atas keselamatan mereka.
- Anak-anak tidak memahami bahaya yang terkait dengan pengoperasian peralatan listrik.
- Jangan pernah membiarkan anak-anak menggunakan alat ini.
- Selalu gunakan pada permukaan dapur yang stabil, kering, datar, dan tahan panas.
- Jangan memindahkan alat saat sedang digunakan.
- Jangan biarkan kabel menggantung di tepi permukaan kerja dapur.
- Jangan biarkan kabel terkena permukaan panas.
- Jangan menggunakan produk pada permukaan yang tidak rata.

Komponen

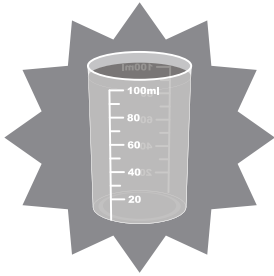


Bonus
Gelas Takar 100mL

Tutup

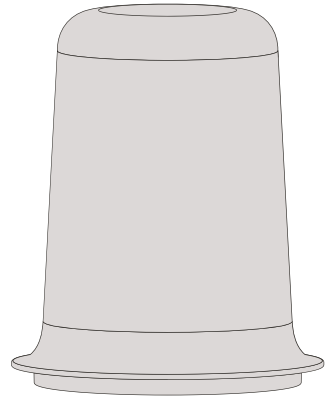


Keranjang

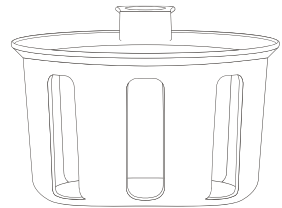

Badan Tangki



Tampilan Panel Kendali

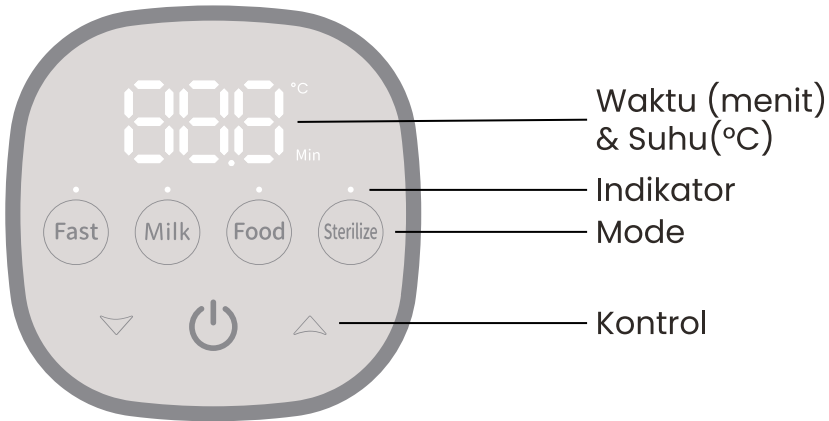

4 pilihan mode. Lampu indikator akan menyala diatas mode yang sedang aktif.



POWER: Alat sedang bersiap ketika lampu berkedip, dan menyala ketika lampu hidup.



DOWN: Saat bersiap, sentuh 2 detik untuk aktivasi **Mode Bisu** . Saat menyala, sentuh untuk menurunkan waktu/suhu.



UP: Saat bersiap, sentuh 2 detik untuk kembalikan pengaturan waktu/suhu ke **AWAL**. Saat menyala, sentuh untuk menaikkan waktu/suhu.



Cara Penggunaan

1. Sambungkan kabel ke stop kontak yang diarde.
2. Masukkan botol susu / tempat makanan / kantong ASI ke dalam keranjang.
3. Masukkan air. Sesuaikan jumlah air sesuai dengan mode yang akan digunakan (lihat halaman berikutnya).
4. **Pilih Mode.** Lampu indikator pada mode yang dipilih akan menyala.
5. Atur waktu & suhu dengan tombol **ATAS & BAWAH**. Ubah satu-per-satu.
6. Biarkan 3 detik dan alat akan bekerja sendirinya.
7. Layar akan menampilkan sisa **WAKTU** atau pengukuran **SUHU** saat itu.
8. Buang air setelah selesai pakai.



Jangan menggunakan bottle warmer tanpa air!



DESKRIPSI MODE

FAST WARMING

1. Isi tangki dengan 80mL air suling / minum.
2. Suhu otomatis dipilih adalah 37°C. Untuk ubah suhu, sentuh **MILK**, lalu atur suhu (37-60°C)
3. Sentuh **FAST**.
4. Atur waktu (0.5-8 minutes). Mesin akan terus bekerja sesuai waktu yang diatur atau hingga dimatikan.

KETAHUILAH

- Durasi penghangatan tergantung pada volume susu, suhu awal susu, material botol/wadah.
- Karena kekentalan yang berbeda-beda, sangat direkomendasikan untuk mengaduk sambil mencairkan susu/makanan untuk hasil yang lebih optimal.
- Tidak boleh langsung mengonsumsi susu/makanan yang baru saja dicairkan.



DESKRIPSI MODE

MILK WARMING

Bisa untuk mencarikan susu/makanan beku hingga suhu ruang atau menghangatkan dari suhu kulkas.

1. Isi tangki dengan 100mL air suling / minum.
2. Sentuh **MILK**.
3. Mesin akan terus bekerja max. 24 jam (tidak bisa diubah) atau hingga dimatikan.
4. Atur suhu (37-60°C).

KETAHUILAH

- Pada mode ini, mesin mempertahankan suhu susu/air pada suhu yang dipilih selama waktu yang dipilih untuk menyesuaikan preferensi bayi.
- Tidak direkomendasikan untuk menghangatkan susu terlalu lama. Setelah dihangatkan, tidak boleh dihangatkan kembali nantinya.



Selalu tes suhu apakah sudah sesuai/cocok bagi bayi. Jangan lupa diaduk agar rata.



DESKRIPSI MODE

FOOD WARMING

1. Isi tangki dengan 80mL air suling / minum.
2. Sentuh **FOOD**.
3. Atur waktu (1-24 jam). Mesin akan terus bekerja sesuai waktu yang diatur atau hingga dimatikan.
4. Atur suhu (45-80°C).

KETAHUILAH

- Hati-hati karena tempat makan bisa jadi sangat panas setelah pemakaian.
- Jangan menghangatkan makanan berkali-kali.
- Durasi menghangatkan berbeda-beda tergantung jenis & kekentalan makanan.



Aduk rata makanan sebelum konsumsi. Mengaduk selama dihangatkan sangat direkomendasikan untuk hasil yang optimal. Periksa suhu apakah sesuai bagi bayi.



DESKRIPSI MODE

STERILIZING


1. Isi tangki dengan 30mL air suling / minum.
2. Sentuh **STEAM**.
3. Atur waktu (5-20 menit). Mesin akan terus bekerja sesuai waktu yang diatur atau hingga dimatikan.
4. Pengaturan suhu akan maksimum pada mode ini.
5. Proses sterilisasi akan berhenti/selesai saat air habis atau waktu berakhir.



KETAHUILAH

- Taruh seluruh bagian botol susu dengan bagian dalam yang menghadap ke bawah. Pastikan uap bisa menjangkau semua bagian.

Pembersihan

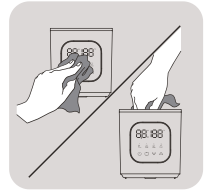

1. Lepaskan kabel & mulai bersihkan setelah suhu kembali normal.
2. Buang air dari tangki.
3. Pastikan tidak ada sisa makanan dalam tangki.
4. Lap bottle warmer dengan kain bersih & lembab pada bagian luar & dalam.

Cleaning Precautions

Jangan rendam dalam air!

- Jika selesai dipakai, air bisa saja sangat panas dan menyebabkan luka bakar; berhati-hatilah saat mengeluarkan sisa air, makanan, dan barang lainnya.
- Jangan menggunakan pembersih kasar, antibakteri, pelarut kimia, pembersih alkali, atau alat tajam untuk. Bersihkan dengan kain lembut dan detergen ringan.
- Anak-anak di bawah 14 tahun tidak boleh melakukan pembersihan dan perawatan; lakukan hanya di bawah pengawasan.

Pembersihan Kerak

1. Buat larutan pembersih kerak dengan campuran cuka putih (50mL/1.7oz) & air dingin (100mL/3.4oz).
2. Tuang larutan tersebut kedalam tangki.
3. Nyalakan bottle warmer, pilih milk warming, biarkan selama 10 menit.
4. Tinggalkan larutan tersebut dalam bottle warmer hingga semua kerak bersih sendirinya.
5. Lepaskan kabel, buang air sisa, dan keringkan.
6. Jika bekas kerak masih terlihat setelah dikeringkan, ulangi proses pembersihan kerak ini.

Descaling Precautions

Jangan rendam dalam air!

- Lakukan pembersihan kerak setiap empat minggu agar alat bisa bekerja dengan baik.
- Anda juga dapat menggunakan pembersih kerak berbahan dasar asam sitrat
- Jangan gunakan pembersih kerak jenis lainnya.



- Simbol ini menunjukkan bahwa produk ini tidak boleh dibuang bersama limbah rumah tangga biasa.
- Silakan ikuti pedoman negara Anda untuk pengumpulan terpisah produk listrik dan elektronik.
- Pembuangan yang tepat membantu mencegah dampak negatif bagi lingkungan dan kesehatan manusia.



Seluruh Hak Cipta Dilindungi
Little Giant Enterprise
www.littlegiant.com.au
www.littlegiant.co.id

Dibuat di China

Diimpor & Didistribusikan
oleh PT LIGIENT
Jakarta Pusat, Indonesia

E-mail:
info@littlegiant.co.id



Manual Book

Multifunction Digital Bottle Warmer

LG.2110





Table of Contents

Specification	3
Functions	4
Safety	5
Safekeeping	8
Component	9
Control Panel	10
Instruction	12
Mode Description: Fast Warming	13
Mode Description: Milk Warming.	14
Mode Description: Food Warming.	15
Mode Description: Steam Sterilize.	16
Cleaning	17
Descaling	18

Specification

Power	200 Watt
Voltage	220V-240V
Frequency	50/60Hz

Storage Environment

Temperature	15-30°C
Humidity	50-80%RH

Functions



Up to 24 hour timer



Easy Touch digital control



Easy wipe to clean



Only one tool, from preparing food to cleaning utensils.



Steam sterilize after feeding baby

Safety

 **Do Not Use Outdoors!** This appliance is intended for use in household and similar applications, such as staff kitchen areas in shops, offices, and other working environments, farmhouses, areas for clients in hotels, motels, and other residential environments, and bed and breakfast (B&B) establishments.

 **Do Not Immerse in Water!** Do not immerse the cord, plug, or entire unit in water or any liquid to prevent fire, electric shock, and personal injury. Only the inside of the tank is designed to be exposed to water for warming or sterilizing purposes.

 **Follow The Instructions!** Misuse of this product can cause a risk of fire, electric shock, and/or personal injury. Only use accessories provided with this appliance to ensure safe operation.

Safety

 **Everyone's Safety** – This appliance can be used by persons aged 14 years and above if they have received instruction on safe usage and understand the associated hazards, or if they are under supervision.

 **Child's Safety** – Always check the food temperature before serving by testing it on a sensitive area of your skin.

 **Heat Alert!** – Do not touch the heating element surface after use, as it retains residual heat. The water inside the unit can reach extremely high temperatures and cause burns, so exercise caution when removing items from the food and bottle warmer.

Safety

 **Do Not Overuse The Warmer!** – Follow the recommended heating guidelines to prevent overheating and ensure food is heated safely.


 **Check Voltage Compatibility!** – Before first use, ensure the appliance is compatible with your electricity supply by checking the voltage rating on the label at the base of the unit.

 **Beware of Damage on Product!** – Regularly inspect the cord and plug for damage. Do not use the appliance if the cord or plug is damaged, if it malfunctions, or if it has been damaged in any way. Any repairs must be performed by a qualified person to prevent hazards.

Safekeeping


- Keep this appliance and its cord out of the reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Young children do not understand the dangers associated with operating electrical appliances.
- Never allow children to use this appliance.
- Always use on a stable, dry, flat, heat-resistant kitchen surface.
- Do not move the appliance while it is in use.
- Do not let the cord hang over the edge of the kitchen work surface.
- Do not let the cord be exposed to hot surfaces.
- Do not use the product on an uneven surface

Component

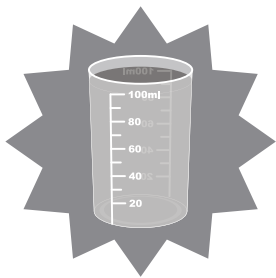


Bonus
Measurement
Cup 100mL

Cover

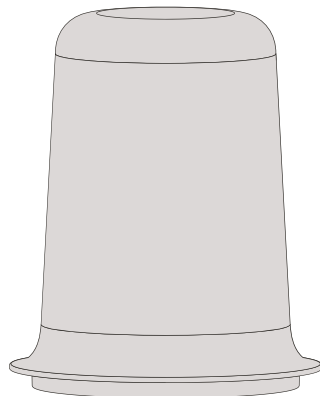


Cradle

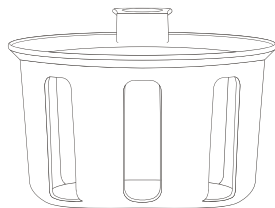

Body Tank



Control Panel Display

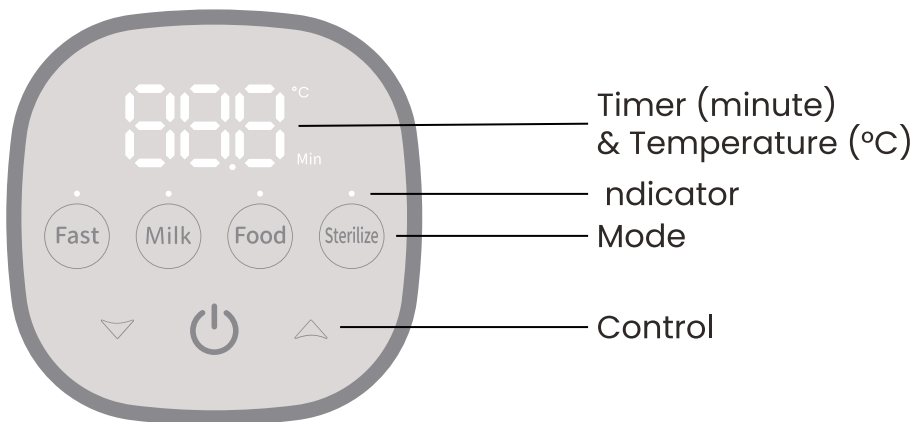

4 Selection of modes. Active mode will have the light indicator above it lit on.



POWER: The appliance is on stand by when the light is flickering, and is power on when the light is lit.



DOWN: On standby, hold touch for 2 seconds to activate **Mute Mode**. On power on, touch to reduce time/temperature.



UP: On standby, hold touch for 2 seconds to clear all temp./time settings back to **DEFAULT**. On power on, touch to add time/temperature.



How to Use

1. Plug in the cable to a grounded wall socket.
2. Put the milk bottle / food container / storage bag inside the cradle.
3. Put in water. The amount of water depends on the mode that will be used (see next page).
4. **Select Mode.** The indicator light above the mode you chose will lit.
5. Set the time or temperature using the **UP & DOWN** button.
6. Leave it for 3 second then it will start working.
7. The screen will show the **TIMER** or the **TEMPERATURE** measurement in real time.
8. Pour out the water after use.

 **Do not start the bottle warmer without water!**



MODE DESCRIPTION

FAST WARMING

- 1.Fill the bottle warmer with 80mL distilled water.
- 2.The default temperature will be 37°C. To change the temperature, select **MILK**, then adjust the temperature (37-60°C).
- 3.Select **FAST**.
- 4.Adjust the timer (0.5-8 minutes).

KEEP IN MIND

- Warming time depends on milk volume, starting temperature, bottle/container material
- Due to the high variety of baby food consistencies, it is strongly recommended to continuously stir & check while defrosting the baby milk/food for optimal result.
- The milk/food should not be eaten directly after thawing.



MODE DESCRIPTION

MILK WARMING

You can defrost frozen milk/food to liquid state or heat up refrigerated milk/food to warmed state.

- 1.Fill the body tank with 100mL distilled water.
- 2.Select **MILK**.
- 3.The bottle warmer will keep running up to 24 hours (not adjustable) or turn it off manually.
- 4.Adjust the temperature (37-60°C).

KEEP IN MIND

- In this mode, the bottle warmer will precisely keep the milk/water at the desired temperature for 24 hours to fit the baby's preference.
- It's not recommended to warm the milk for too long. Once heated, do not reheat again



Test if the temperature is suitable for feeding or not. Before feeding, mix the milk well and even.



MODE DESCRIPTION

FOOD WARMING

- 1.Fill the body tank with 80-120mL distilled water.
- 2.Select **FOOD**.
- 3.The bottle warmer will keep running up to 2 hours (not adjustable) or turn it off manually.
- 4.Adjust the temperature (45-80°C).

KEEP IN MIND

- Be cautious as the food container / jar can be very hot after using this function
- Do not reheat food too many times.
- Warming duration may varies based on the type of food & its consistencies.



Stir the food well before feeding. Stirring while warming is strongly recommended for optimal result. Test if the temperature is suitable for feeding or not.



MODE DESCRIPTION

STERILIZING

1. Fill the bottle warmer with 30mL distilled water.
2. Select **STEAM**.
3. The bottle warmer will keep running up to 10 minutes (not adjustable) or turn it off manually.
4. The temperature will be maximum in this mode.
5. The bottle warmer disinfection process will be stopped/completed if the water dried out before 10 minutes.




KEEP IN MIND

- Place all of the disassembled milk bottle with the insides facing down. Make sure the steam can reach every parts.



Cleaning

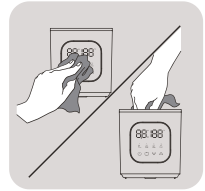

1. Unplug the bottle warmer & clean after it cool down.
2. Pour out water from the tank for hygienic reason.
3. Make sure no baby food remains in the body tank.
4. Wipe the bottle warmer with a moist & clean cloth inside out.

Cleaning Precautions

Do not immerse in water!

- The water inside the unit gets very hot and can cause burns, be careful when removing items from the food and bottle warmer.
- Do not use abrasive, antibacterial cleaning agents, chemical solvents, alkaline cleaning agents, or sharp tools to clean the device. Use a soft cloth and a mild detergent.
- Children under 14 should not perform cleaning and user maintenance. Only do so only under supervision.

Descaling

1. Make the descaler solution with with a mix of white vinegar (50mL/1.7oz) & cold water (100mL/3.4oz).
2. Pour in descaler solution into the tank.
3. Switch on the bottle warmer, select milk warming setting, operate for 10 minutes.
4. Leave the solution in the bottle warmer until all scale has dissolved.
5. Unplug the bottle warmer, pour out the water, and rinse the tank thoroughly.
6. If you still see traces of descale after rinsing, repeat the descaling procedure.

Descaling Precautions

Do not immerse in water!

- Descale once every four week to ensure it continues to work efficiently.
- You can also use citric acid based descaler
- Do not use other types of descaler



- This symbol indicates that this product should not be disposed of with regular household waste.
- Please follow your country's guidelines for the separate collection of electrical and electronic products.
- Proper disposal helps prevent harm to the environment and human health.



All Rights Reserved
Little Giant Enterprise
www.littlegiant.com.au
www.littlegiant.co.id

Made in China

Imported & distributed by
PT LIGIENT
Central Jakarta, Indonesia

E-mail:
info@littlegiant.co.id